

Vehicle: Programming and Relearning

Remote Keyless Entry (RKE) - Transmitter

1. Start with the ignition OFF, hold down the power unlock button on the door panel. Turn ignition key ON, OFF, ON, OFF. Release power unlock button on the door panel. The locks will cycle once.
2. Hold down the keyless entry transmitter LOCK and UNLOCK buttons for **15 seconds**. The locks will again cycle once.
3. Repeat step #2 for each additional keyless entry transmitter.
4. Turn the ignition on to exit the keyless entry transmitter programming mode. Programming is now complete.

Method 2-Scan Tool Required

In the event that a transmitter is lost, program the old and the new transmitters into the memory of the remote control door lock receiver. Up to 4 transmitters may be programmed.

IMPORTANT: Once the keyless entry receiver enters the programming/diagnostic mode, the programming of the first transmitter erases all previous transmitter programming information. You must then program all of the transmitters.

Program only 1 vehicle remote control door lock receiver at a time. If you program multiple receivers simultaneously, the same transmitter may possibly be programmed to more than 1 remote control door lock receiver.

The following procedure describes how to program the remote control door lock transmitters to the remote control door lock receiver using the Tech 2 You may also use an equivalent scan tool in order to perform this procedure.

Perform the following steps:

1. Connect the scan tool to the following components:
 - ^ An applicable power source
 - ^ The vehicle data link connector (DLC)
2. Turn the ignition ON.
3. At the application menu screen, select F0 (body control module).
4. At the body control module screen, select F2 (special functions).
5. At the special functions menu screen, select F3 (program key fobs).
6. Follow the directions on the scan tool display in order to program the transmitters.
7. Press EXIT repeatedly until you view the application menu screen.
8. Disconnect the scan tool from the following components:
 - ^ The accessory power port
 - ^ the vehicle DLC
9. Validate that all the transmitters that were programmed operate properly. Refer to Remote Keyless Entry System Operation.